
 


15 IN 4 Push-Button User's Guide

15 IN 4 Push-Button Overview

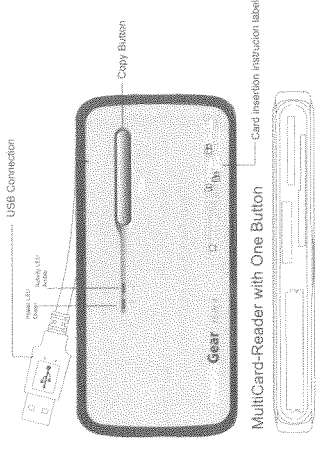

MultiCard-Reader with One Button

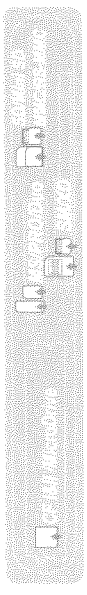

Details: Card Insertion Instruction Label

Definitions

Power LED: This indicates that the 15 in 4 push-button is receiving power and is operating correctly.
Power LED may not light if drivers are not installed.

Copy Button: This button begins the copy process from flash memory to the designated folder on your computer.

USB Connection: USB Connection between 15 in 4 push-button and computer.

Flash Memory Openings: Supports Compact Flash I & II, Microdrive, Memory Stick (Standard, Pro, Duo, Pro Duo, MagicGate, MagicGate Duo) Secure Digital, Mini-SD, MultiMediaCard, RS-MMC, xD-Picture Card, and SmartMedia.

Software Installation

1. Insert Software CD supplied into the CD-ROM. Autorun should start automatically.
2. If the Autorun fails to begin the installation go to "My Computer" and double click your CD ROM icon.
3. Double Click on "Setup.exe".
4. Follow the on-screen instructions to complete the installation.

Note:
 Software application will install drivers for Windows 98/98SE only. Windows 2000 must be updated to Service Pack 3 or later for proper operation. Windows ME and XP require no drivers.

Copy Button application WORKS WITH:
 Windows: 2000 and XP

Copy Memory Cards

Push Button Copy:

1. Depress Copy Button to begin copying to your computer.
- Copy in progress will be displayed on your computer monitor. All files will be copied to the default directory.

Manual Copy:

1. Go to "My Computer".
2. Double click on the removable disk icon corresponding to your memory card.

Finding copied files:

1. Double click on the "My Photos" shortcut icon on your desktop.

Changing the location of where the 15 in 4 copies to:

1. Right click on the Push-Button application icon in your system tray next to the time.
2. Click on Change Storage Location
3. Type in the new location in the space provided or Browse to the new location.

Installation Tips

If no removable drives are listed under Windows 98 follow these steps:

1. Install the software CD that accompanied the 15 IN 4. (If you have not done so Already)
2. Plug the 15 IN 4 into the USB port.
3. Open Device Manager by right-clicking on My Computer and choosing properties.
4. Under "Device Manager" look under "Other Devices" or "Universal Serial Bus Controllers" for "Unknown Device" or "Mass Storage Device" you may only have one or the other. They should have either a 1 or 7 to the left of them.
5. Hi-light the "Unknown Device" or "Mass Storage Device" by clicking on it.
6. Click on the "Remove" button
7. Click "Yes" or "OK" when asked if you're sure you want to remove this device.
8. Click on the "Refresh" button
9. Windows should find the drivers that you have installed and load the device properly.

If the 15 in 4 PB doesn't show up under Device Manager follow these steps.

1. Plug the 15 IN 4 into a different USB port on the computer.
2. Try the 15 IN 4 on a different computer to determine if reader function properly. (Preferable Windows ME or Windows XP)

Can't open flash memory card under "My Computer"

1. Check under "My Computer" to make sure four (4) drives appear.
2. Check to ensure that the flash memory card is inserted in the correct direction. Try flipping over.

Note:
 Do Not Force The Card Into The Slot! Damage to the Memory Card and the 15 in 4 may occur!

3. Format the card in the camera or device that it is being used with, then retry.

WARNING:
 Formatting deletes all data!

Technical Support

• on-line: www.mymediagear.com • e-mail: support@mymediagear.com • tel: 714.564.7719

This guide is copyright ©2005 MediaGear Inc. All Rights Reserved.